



AP	AMP Superseal 3-Pin		
Pin	Voltage Output	4-20mA Output	Wire Color
1	Common	V-	Black
2	Output	V-	White
3	V+	V+	Red

* Pull on the tab to unlatch to unplug.

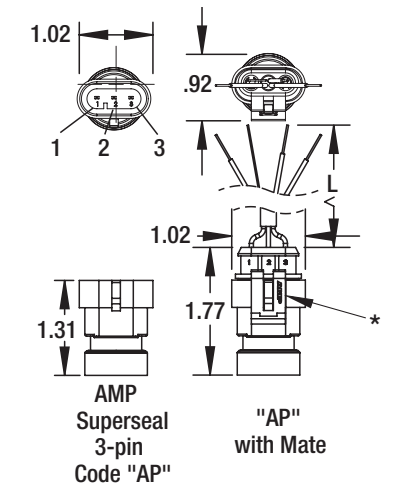


B4		MIL DTL 26482 4-Pin	
Pin	Voltage Output	4-20mA Output	Wire Color
A	V+	V+	Red
B	Output	N/C	White
C	Case GND	Case GND	Green
D	Common	V-	Black


* Twist counter clockwise while pressing down the receptacle to unplug.

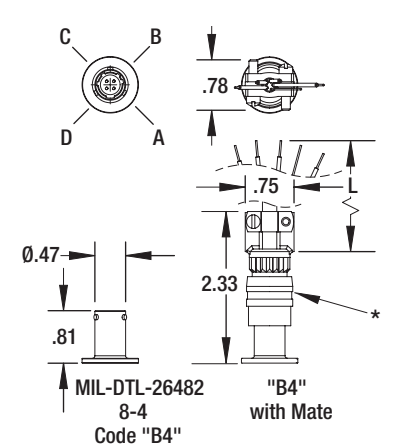


FC, FV	Over-mold Cable		
Pin	Voltage Output	4-20mA Output	Wire Color
-	V+	V+	Red
-	Common	V-	Black
-	Output	N/C	White
-	Case GND	Case GND	Green

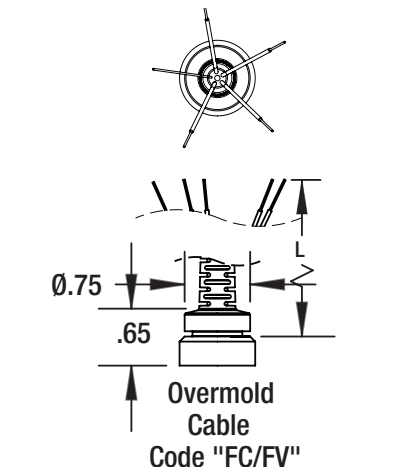

MF	M20 Conduit Flying Leads		
Pin	Voltage Ouput	4-20mA Output	Wire Color
-	V+	V+	Red
-	Common	V-	Black
-	Output	V-	White


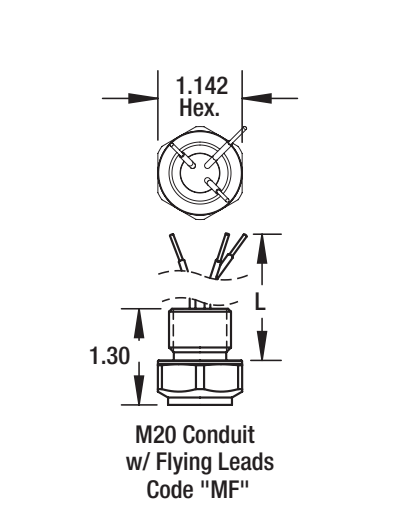


CF	½" NPT Conduit With Flying Leads		
Pin	Voltage Output	4-20mA Output	Wire Color
-	V+	V+	Red
-	Common	V-	Black
-	Ouput	V-	White

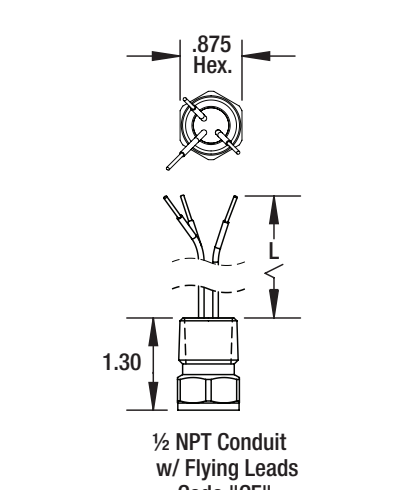

DA	Hirschmann EN 175301-803 Form A		
Pin	Voltage Output	4-20mA Output	Wire Color
1	V+	V+	Red
2	Common	V-	Black
GND	Case GND	Case GND	Green
3	Output	N/C	White

* Loosen the screw to unplug.

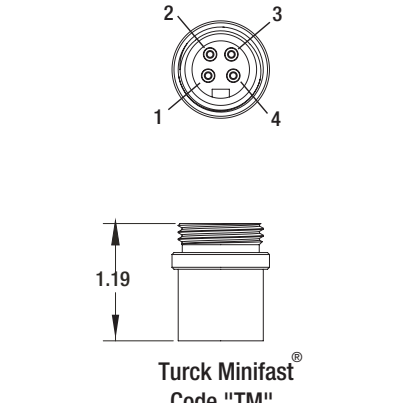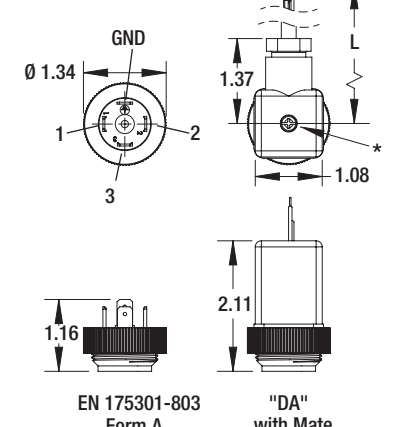

TM	Turck Minifast®		
Pin	Voltage Output	4-20mA Output	Wire Color
1	Common	V-	N/A
2V	+V	+	N/A
3	Output	N/C	N/A
4C	Case GND	Case GND	N/A

E2S PRESSURE TRANSDUCER

Ashcroft Drawing 825A030

General Notes

- Control equipment connected to Associated Apparatus must not use or generate more than 250 Vrms or Vdc.
 - Associated apparatus manufacturer's installation drawing must be followed when installing this equipment.
 - Run shielded interconnection cable with shield connected to FM approved associated apparatus ground.
 - Must use class 2/SELV power supply.
- Warnings**
- Do not disconnect equipment unless area is known to be non-hazardous.



- Substitu

- No revision to drawing without prior approval from FM
- Once the type of protection has been marked on the label, it shall not be changed.

Specific Conditions of Use

- Certain configurations of the pressure transducer are not rated to withstand a 500 Vrms dielectric strength test between the circuit and earth ground. This limitation must be considered during installation.
- Some of the pressure transducers may include connectors that are constructed of plastic. To prevent the risk of electrostatic sparking, the plastic surfaces should only be cleaned with a damp cloth. The risk of electrostatic discharge shall be minimized at installation, following the direction given in the instruction manual.
- The equipment is assembled with inputs rated Ex ia/Division 1 and when connected to approved Ex [ia] barriers (associated apparatus), the I.S. circuit is suitable for Zone 0 / Division 1. When the equipment is connected to approved Ex [ic] barriers, the equipment rating becomes Ex ic / Division 2 (Non-incendive) and the I.S. circuit is suitable only for Zone 2 / Division 2.
- The designated installation for Intrinsically Safe or Non-incendive protection is selected on the Ex Marking label using a permanent marking method prior to installation by applying a mark into the reserved checkbox for the protection.

WARNING: Specific Conditions of Use. See Installation Drawing 825A030

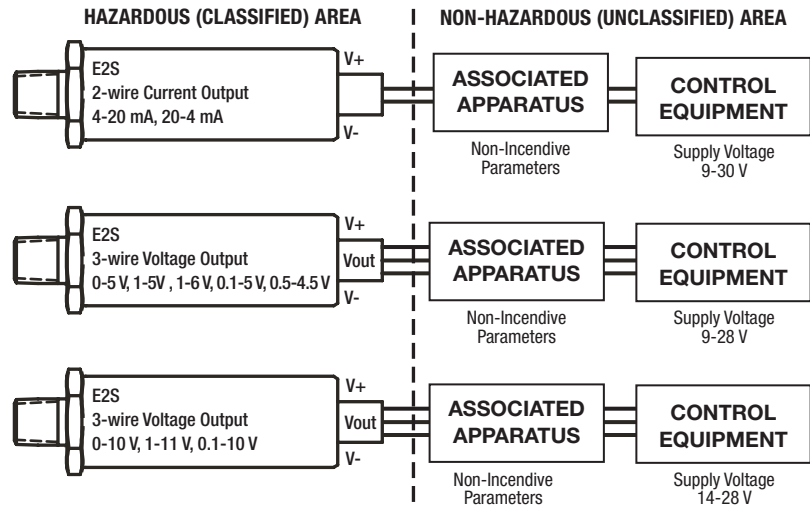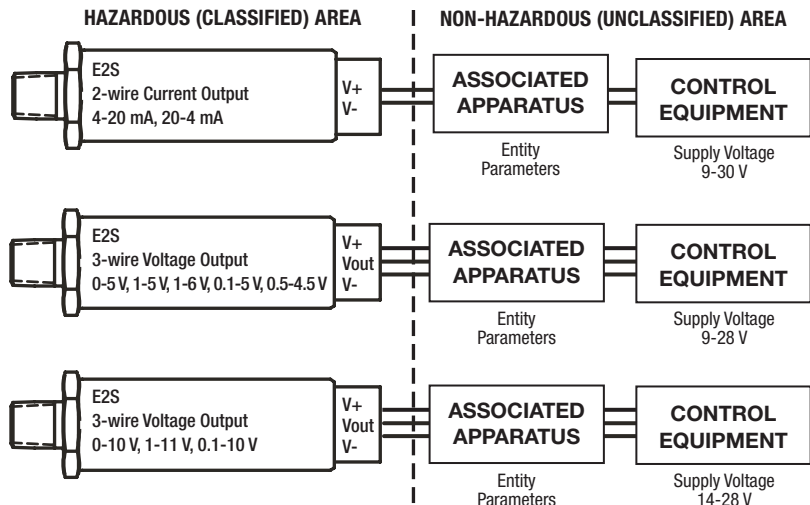

FM:

Intrinsically Safe Installation:	
Class 1, Division 1,	CL I DIV 1 A, B, C, D
Group A, B, C, D	T4, Ex ia
T4 (-40°C ≤ Ta ≤ 80°C)	Ex ia IIC T4 Ga

Non-Incendive Installation:	
Class I, Division 2,	CL I DIV 2 A, B, C, D
Group A, B, C, D	T4
T4 (-40°C ≤ Ta ≤ 80°C)	Ex ic IIC T4 Gc



FM18US0309X

Intrinsically Safe Installations:
 Class I, Zone 0, AEx ia IIC T4 Ga $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$
 Class I, Zone 2, AEx ic IIC T4 Ga $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$



II 1 G Ex ia IIC T4 Ga $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$
II 3 G Ex ic IIC T4 Gc $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$



23CA80101890X

23CA80101890X

Ex ia IIC T4 Ga $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$
Ex ic IIC T4 Gc $-40^{\circ}\text{C} \leq T_a \leq 80^{\circ}\text{C}$

ASHCROFT®
E2S-INTRINSICALLY SAFE AND
NON-INCENDIVE PRESSURE
TRANSDUCER
INSTALLATION MANUAL

Reference E2S I&M 011-10316 for French



WARNING! READ
BEFORE INSTALLATION

A failure resulting in injury or damage may be caused by excessive overpressure, excessive vibration or pressure pulsation, excessive instrument temperature, corrosion of the pressure containing parts, or other misuse. Consult Ashcroft Inc., Stratford, Connecticut, USA before installing if there are any questions or concerns.

OVERPRESSURE:

Pressure spikes in excess of the rated over-pressure capability of the transducer may cause irreversible electrical and/or mechanical damage to the pressure measuring and containing elements.

Fluid hammer and surges can destroy any pressure transducer and must always be avoided. A pressure snubber should be installed to eliminate the damaging hammer effects. Fluid hammer occurs when a liquid flow is suddenly stopped, as with quick closing solenoid valves. Surges occur when flow is suddenly begun, as when a pump is turned on at full power or a valve is quickly opened. Liquid surges are particularly damaging to pressure transducers if the pipe is originally empty. To avoid damaging surges, fluid lines should remain full (if possible), pumps should be brought up to power slowly, and valves opened slowly. To avoid damage from both fluid hammer and surges, a surge chamber should be installed.

Symptoms of fluid hammer and surge's damaging effects:

- Pressure transducer exhibits an output at zero pressure (large zero offset).
- Pressure transducer output remains constant regardless of pressure
- In severe cases, there will be no output.

©2025 Ashcroft Inc., 250 East Main Street, Stratford, CT 06614-5145, USA
Tel: 203-378-8281, Fax: 203-385-0499, www.ashcroft.com. All sales subject to standard terms and conditions of sale.
E2S_transducer_I&M_011-10268_RevE_11-24-25.

FREEZING:

Prohibit freezing of media in pressure port. Unit should be drained (mount in vertical position with electrical termination upward) to prevent possible over-pressure damage from frozen media.

STATIC ELECTRICAL CHARGES:

Any electrical device may be susceptible to damage when exposed to static electrical charges. Additionally these sensors may include a plastic connector, which may increase the risk of static discharge. To avoid damage to the transducer, observe the following:


- Operator/installer should follow the proper ESD (electrostatic discharge) protection procedures before handling the pressure transducer.
- Ground the body of the transducer BEFORE making any electrical connections
- When disconnecting, remove ground LAST! Note: The shield and drain wire in the cable (if supplied) is not connected to the transducer body, and is not a suitable ground.

VENT

All units with a pressure range less than 500 psi include a small Porex filter in the unit. This is necessary to equalize the internal pressure of the unit with the atmospheric pressure. While the Porex filter is hydrophobic, if it not properly protected it may be a source of water ingress.

NOTE: Checkboxes provided on the label must be marked during installation. Installer - be sure to check each box as appropriate to indicate the protection methods used on a particular installation. Once the type of protection has been marked it shall not be changed.

NOTE: The product label below displays all applicable approval agency marks and warnings in English and French. The specific marks included may vary depending on the product configuration, and the French warning may not be present in all cases.

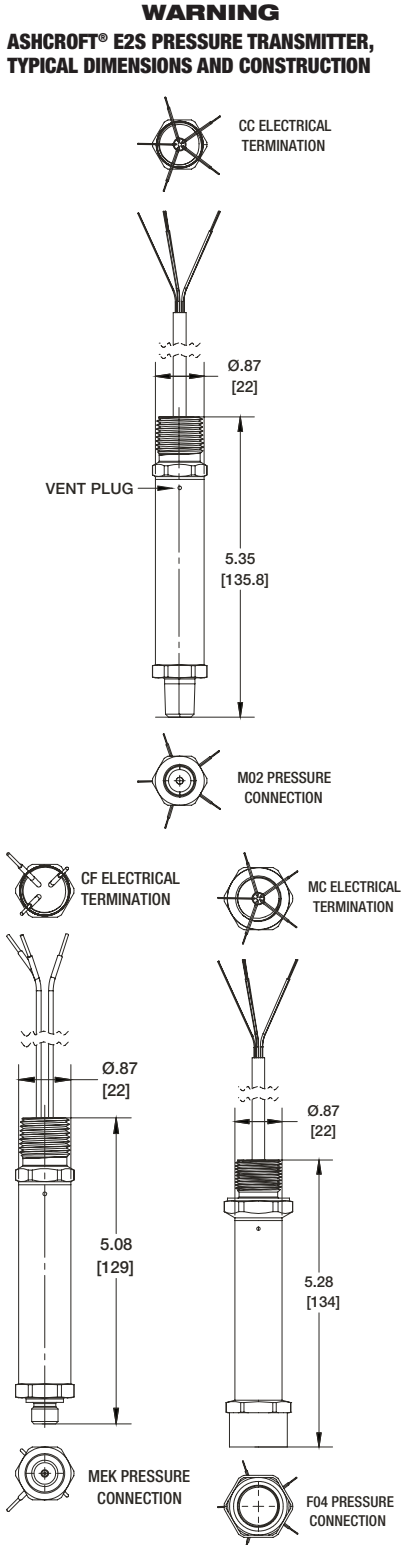

DESCRIPTION

The Ashcroft® Model E2S is ideal for a broad range of pressure sensing requirements found in general and heavy industrial applications as well as applications in test and measurement. The E2S offers a wide variety of material, process and electrical connections to meet your application requirements. It is designed for use with both liquids and gases it provides an accurate, reliable and highly repeatable output. This is accomplished through the use of an onboard microprocessor that is programmed during a unique digital compensation process to provide an extremely linear performance over the entire specified pressure and temperature range.

SPECIFICATIONS

Reference condition: 70 °F (21 °C)

Accuracy: ±0.25%, ±0.50% or ±1.00% of Span Terminal Point (* includes linearity, hysteresis, repeatability zero offset and span)

Repeatability: ≤ ±0.1 % of Span

Stability: ±0.25% of Span / Year

Zero / Span Adjustment: ±5% of Span

Standard Ranges: VAC to 20,000 psi

ENVIRONMENTAL SPECIFICATIONS

Enclosure Rating:

(Self-Certified by Ashcroft, Inc.): IP66, IP67 or NEMA 4X (enclosure rating depending on electrical connector)

Temperature Limits:

Storage Temp: -50 to 125 °C

Operating Ambient Temp: See drawing 825A030 for ambient temperature limits.

Media Temp: See drawing 825A030 for media temperature limits.* (0-100% R.H. non-condensing)

Temperature Coefficients: Zero & Span ±0.009%/°C within -40 to 80 °C

Vibration: Random: 10g RMS 20-2000 Hz

Shock: 80g Peak, 6 msec, 3 axes, haversine

Proof pressure: 1.2X -2X the range

Burst pressure: 3X-8X the range mini



FUNCTIONAL SPECIFICATIONS

EMC		
EMC:	Directive 2014/30/EU, and EN61326-1, EN61326-2-3 (Industrial Env.)	
Immunity:	61000-4-2 (ESD)	±4kV/±8kV (Contact/Air)
	61000-4-3 (Radiated RF)	10 V/m to 1GHz, 3 V/m to 2GHz, 1 V/m to 2.7GHz
	61000-4-4 (EFT/Burst)	±1kV (5/50ns, 5kHz)
	61000-4-5 (Surge)	±1kV, Earth to Shield over all I/O lines
	61000-4-6 (Conducted RF)	3V (0.15 to 80MHz)
	61000-4-8 (Line Freq. Magnetic)	30A/m
Emissions:	EN 55011 (CISPR 11) Class A, Group 1 & FCC (47 CFR 15)	

ELECTRICAL SPECIFICATIONS

Intrinsically Safe and Non-Incendive Installations

NOTE: For Intrinsically Safe and Non-Incendive Installations refer to Entity Parameters on Ashcroft drawing 825A030 (wiring and installation).

Supply Current: <8 mA (Vout)

Response Time (Output): 4 msec

Power-Up Response Time: 100 msec

Current Source/Sink for Voltage Output:
1 mA (Source) / 0.1mA (Sink) maximum

Withstand/Breakdown: 100 Vdc / 100 Vac.
Optional 500 Vdc / 500 Vac

Insulation Resistance: >100 M @ 30 V

RoHS2: Yes

MECHANICAL SPECIFICATIONS

Process Connections: Male NPT (⅛, ¼ and ½), Female NPT (⅛, ¼ and ½), 7/16-20 UNF SAE (Male and Female), MIL 33656 (UNJF 7/16-20 w/ 37° Cone), G¼" B EN837-1, G½" B EN837-1, G¼" A DIN3852-E, Autoclave HP 7/16" (AMINCO), R¼, R ½, ¼" Male VCR, ¼" Female VCR, R¼ ISO 7/1, 1.5" Tri-Clamp, 2.0" Tri-Clamp

Electrical Connections: Amp Superseal, Deutsch DT04-3P, Hirschmann EN175301-803 Form A, Hirschmann EN175301-803 Form C, Metri Pak, Mini Hirschmann, M12 (4 Pin), MIL DTL 26482 (4 Pin), Overmolded Cable, ½" NPT Conduit with Flying Leads, M20 Conduit Connection with Flying Leads, ½" NPT Conduit Connection with Cable, M20 Conduit Connection with Cable, Turk MINIFAST®
Note: Cable can be vented or unvented.

Diaphragm Materials: 17-4PH Stainless steel, 316L Stainless steel or A286 Stainless steel

INSTALLATION AND ASSEMBLY

All supply lines should be arranged so that there are no mechanical forces acting on the device.

For units with NPT type pressure fittings apply Teflon® tape or an equivalent sealant to the threads before installing. When tightening, apply a wrench to the hex wrench flats located just above the pressure fitting. DO NOT tighten by using a pipe wrench on the housing.

Process connection:


- By authorized and qualified personnel only.
- All lines need to be depressurized when the instrument is being connected.
- Appropriate steps must be taken to protect the device from pressure surges.
- Check the suitability of the device for the media to be measured.
- Maximum pressures shall be observed.
- Check that all connections are tight before use.

If during installation the pressure measuring lines are already under pressure, the zero point cannot be checked and no settings can be adjusted. In these cases, the device should only be connected electrically first.

Electrical connection:

Reference: Drawing 825A030

FOR TRANSMITTERS WITH 4-20mA OUTPUT SIGNAL, THE MINIMUM VOLTAGE AT THE TERMINAL IS 9VDC

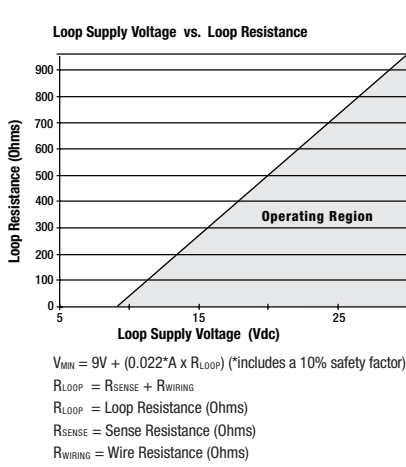

Noise

For minimum noise susceptibility, avoid running the transducers cable in a conduit that contains high current AC power cables. Where possible avoid running the cable near inductive equipment.

Shielded Cable

Units with shielded cable electrical termination, connect the drain wire to the guard terminal on the read out device or measuring instrument, if available. In all other cases connect to the ground or to the power supply negative terminal.

Range Type	Offset Value	Span Value
0 to Positive Pressure Range	0	Full Range
0 to Vacuum	Vacuum	0
Compound (Vac to pressure range)	Vacuum	Full Range
Absolute	Absolute Zero	Full Range Absolute

Offset and Span adjustments

1. **WARNING!** Disconnect the E2S transducer from the control system prior to performing offset and span adjustments.
2. Activate calibration mode by first cycling power off and on, and then within 30 seconds tap the Ashcroft calibration magnet near the specified area on the E2S label. The initial code to enter the calibration mode is 1-3-1 (Tap the unit for one second, release. Tap unit for three seconds, release, tap unit for one second, release).

1. When the calibration mode has been activated the output signal on the transducer will drive from over range to under range.
2. At the offset pressure record output offset to be used in the span adjustment in step 4. Increase pressure to 100% of span, this will allow you to adjust the span of the unit. The span is adjustable to +/- 5% of full scale.
3. Tap the magnet near specified area on the E2S label. Adjust span to desired span value plus the offset value recorded in step 3. (The span will increase from its current value up to +5% of scale. Once the output has reached the max value, the span will jump to -5% and continue to increase. (Note - holding the magnet in position while adjusting the span will increase the speed at which the span increases or decreases. Once you get close to your desired setting you should tap the magnet against the unit for finer adjustment. If you scroll past your desired value, repeat step three until you have reached your desired span value.
4. Decrease the pressure to 0% of span, this will allow you to adjust the zero of the unit. The offset is adjustable to +/- 5% of full scale.
5. Tap magnet near specified area on the E2S label. Adjust the offset to the desired value. (The offset will increase from its current value up to +5% of scale. Once the offset output has reached the max value, the zero will jump to -5% and continue to increase. (Note - holding the magnet in position while adjusting the offset will increase the speed at which the offset increases or decreases. Once you get close to your desired setting you should release the magnet and tap it against the unit for finer adjustment. If you scroll past your desired value, repeat step 6 until you have reached your desired offset value.
6. Once you have completed step 6, you can repeat step 3 through 6 to adjust or check your calibration
7. Once you have verified the calibration, the unit will exit the calibration mode after 30 seconds of magnetic inactivity. This will be signaled by the output of the transducer driving to over range, under range and back to the normally calibrated output.

MAINTENANCE

The device does not require maintenance. In order to ensure reliable operation and a long service life of the device we recommend regular checking of the device as follows:

- Check the function in connection with system components.

- Check the tightness of the pressure connection lines.
 - Check the electrical connections.
- The exact test cycles have to be adapted to the operating and environmental conditions. The operating manuals of all other devices are also to be observed if there is an interaction of different device components. Note: When not installed, ensure that the non-metallic parts avoid exposure to UV sources

TRANSPORT

The product must be protected against severe impacts therefore transport is to be effected only in the packaging intended for transport.

SERVICE

E2S transducers are not for repair. All defective or faulty devices are to be sent directly to Ashcroft Inc. We would ask you to coordinate all device returns with our inside sales department. Our inside sales department will issue an RMA number and give instructions on how to ship the return.

WARNING


Remaining process media in and on dismantled measuring instruments may cause danger to persons, environment and equipment. Take reasonable precautions! Clean the instrument thoroughly if necessary. To return the unit please choose the original packaging or a packaging intended for transport.

DISPOSAL

Incorrect disposal can put the environment at risk. Kindly help us protecting the environment and dispose of or recycle the used products in accordance with the relevant regulations.


DC	Hirshman EN 175301-803 Form C		
Pin	Voltage Output	4-20mA Output	Wire Color
1	V+	V+	Red
2	Common	V-	Black
3	Output	N/C	White
GND	Case GND	Case GND	Green

* Loosen the screw to unplug.

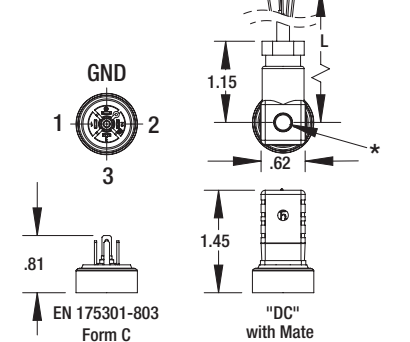

GN	3-Pin Metri Pack		
Pin	Voltage Output	4-20mA Output	Wire Color
A	Common	V-	Black
B	V+	V+	Red
C	Output	V-	White

* Pull on the tab to unlatch to unplug.

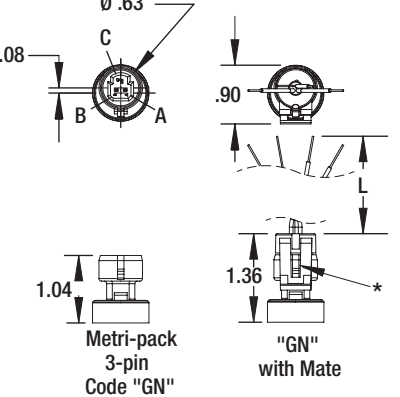

HM	Mini-Hirschmann GW41F		
Pin	Voltage Output	4-20mA Output	Wire Color
1	V+	V+	Red
2	Common	V-	Black
3	Output	N/C	White
4	Case GND	Case GND	Green

* Loosen the screw to unplug.

